



TOWN

FOOD SERVICE EQUIPMENT CO., INC.



72 Beadel Street Brooklyn, NY 11222
718/388-5650 outside New York State 800/221-5032
facsimile 718/388-5860
www.townfood.com



RiceMaster



Automatic Electronic Rice Cooker Owner's Manual

56822 25 cup, 120V AC | **56824** 25 cup, 230V AC

57137 37cup, 120V AC | **57138** 37cup, 230V AC) | **57155** 55 cup, 230V AC

FOR COMMERCIAL USE ONLY

Warning

These units are to be used only for cooking rice—do not use to cook or reheat food.

Important

Keep this manual for future reference.

This emergency information must be prominently displayed

Completely read and understand these instructions prior to using this unit.

Questions

Any questions regarding the use of this unit should be directed to your dealer or our customer service department at 718/388-5650 M-F 9am to 5pm EST.

Congratulations on your purchase of a RiceMaster Electronic Rice Cooker. It is the most advanced and best supported electronic rice cooker available. Each rice cooker carton has been carefully inspected and includes:

PARTS IDENTIFICATION



RECORD OF OWNERSHIP

For your records, please record the following information. It will be required if service is needed.

DATE OF PURCHASE _____ MODEL _____

SERIAL NUMBER _____ DEALER _____

DEALER'S PHONE NUMBER _____



SPARE PARTS

item number	description
56839, 57210	foot
56845S	high limit cut off
56840, 57142, 57208	body handle
56931	measuring cup
57141, 57204, 56833	cover handle
56844, 57139, 57155P	rice pot
56822HP, 56824HP, 57137HP, 57138HP, 57155HP	heating element



56839
foot



56834S
sensing element



56840, 57142, 57208
cover handle



56845S
high limit cut off



56840, 57142, 57208
cover handle




56844, 57139, 57155P
rice pot



57141, 57204, 56833
body handle



56931
measuring cup

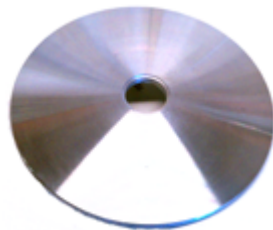

56822HP, 56824HP,
57137HP, 57138HP,
57155HP
heating element



IMPORTANT SAFEGUARDS

When using the rice cooker, basic safety precautions should always be followed:

- Read all instructions.
- Do not touch hot surfaces. Use knobs or handles.
- To protect against electrical hazards do not immerse cord, plugs, or rice cooker in water or any other liquids. Only the pot should be immersed.
- Close supervision is imperative when any appliance is used by or near children.
- Unplug from wall outlet when not in use or before cleaning. Allow to cool before installing or removing parts.
- Do not operate the rice cooker with a damaged cord or plug, after it malfunctions, or has been damaged in any manner. Return unit to the dealer from whom it was purchased. Request a Return Goods Authorization (RGA) number to return the rice cooker to the factory for examination, repair or adjustment.
- The use of any non factory supplied accessories or attachments is not recommended and may cause damage.
- Do not use outdoors.
- Do not allow cord to hang in any way or touch hot surfaces.
- Do not place on, near, or in heated appliances.
- Do not attempt to move or drain unit when it contains any hot liquids.
- Be sure power is off before removing plug from wall outlet.
- Do not use this appliance for any other use not intended by the manufacturer.
- **Save these instructions.**



Town Food Service Equipment Company, Inc.

718/388-5650 outside New York State 800/221-5032

OPERATING INSTRUCTIONS

- 1) Wash the rice in a container other than the rice pot. You will notice that during the first wash water is nearly the color of milk. It contains starch that makes the rice sticky. Continue to wash until water is almost clear.
- 2) Put the washed rice in the cooking pot. Fill with water until it covers the rice by approximately 1". Use one cup of water to each cup of rice. The exact proportions change with the type of rice being cooked. Different kinds of rice absorb water at different rates. Do not use the rice cooker to boil foods with high acidity or alkalinity—it will damage the pot.

**maximum
capacity**



do not exceed limit marked on pot

- 3) Dry pot exterior and place gently in the body, rotating it once in position to be sure the rice pot is completely in contact with the heating element. To ensure that the rice pot is not dented, gently rock the pot from side to side when placed in the unit. Be sure to keep the outside of the pot clean.
- 4) With the rice pot in position, plug the cord into an appropriate wall outlet.
- 5) To start the rice cooker, press the ON/OFF button on the front control panel. The POWER light and the HOLD light will come on. To begin the cooking cycle press the PRESS TO COOK button. The COOK light will come on and the HOLD light will go off. To ensure evenly cooked rice stir rice at least twice during cooking cycle.
- 6) When the rice is cooked, the COOK light will go off and the HOLD light will come on. Let the rice remain covered in the unit to steam for another 10 minutes. The rice will "cure" and become more flavorful.




Town Food Service Equipment Company, Inc.

718/388-5650 outside New York State 800/221-5032

CLEANING THE UNIT AND KEEPING IT CLEAN

KEEP THE UNIT CLEAN

Heater, thermostat, and pot must be clean if the unit is to operate properly. Rice, water, or anything else that is allowed onto heater will cause early shut off, uneven cooking, or unit damage. Pot exterior must also be clean.

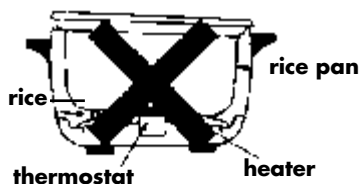

DO NOT DENT POT OR USE IF FOR ANY OTHER PURPOSE

Changing the shape of the pot will cause the unit to shut off early, cook unevenly, or fail. Replace pot if dented.



DO NOT PLUG UNIT IN WITHOUT POT

It can cause heater to deform. Deformed or damaged heaters must be replaced before further operation. Make sure to unplug unit before removing pot.



DO NOT SPLASH WATER ONTO BODY

Remember this is an electric appliance. Rice cooker and pot exterior must be clean and dry before use. Failure to follow this instruction will not only damage unit but create electrical hazard.



TO CLEAN

- 1) Be sure unit is unplugged.
- 2) Soak pot interior to loosen rice that is stuck to the pot.
Do not allow outside of pot to become dirty or greasy.
- 3) Do not immerse body; wipe with a damp cloth.
- 4) Do not use abrasive cleaners that will damage unit.
- 5) Be sure to keep the heater plate clean by wiping with a damp cloth after each use. Do not allow food to build up and become encrusted on the heater plate. Encrustation on the heater plate may cause the unit to fail.



Town Food Service Equipment Company, Inc.

718/388-5650 outside New York State 800/221-5032

Vicente's Mexican Rice

30 servings

INGREDIENTS

- 4 oz. peanut oil
- 6 cups long grain rice
- 6 cups water
- 3 cups beef stock
- salt and freshly ground pepper to taste
- crushed chilies to taste
- generous pinch of saffron
- 3 large tomatoes, peeled, seeded and chopped
- 4 garlic cloves
- 1 red bell pepper, diced
- 1 onion, peeled and chopped

DIRECTIONS

- 1) Place peanut oil and rice into rice pot.
- 2) Press the **ON** button and then press the **COOK** button.
- 3) Stir rice in peanut oil approximately every minute until **COOK** light goes off.
- 4) Pour the 6 cups of water and remaining ingredients into the rice. Stir thoroughly and cover with lid.
- 5) Set timer for 30 minutes to soak the rice.
- 6) After 30 minutes stir thoroughly. Push the press the **COOK** button. When the **COOK** light goes off the **HOLD** light will come on. Allow the seasoned rice to cure for 10 to 15 additional minutes.
- 7) Rice is now ready to serve. *Buen provecho!*




Town Food Service Equipment Company, Inc.

718/388-5650 outside New York State 800/221-5032

Shrimp Jambalaya

30 servings

INGREDIENTS

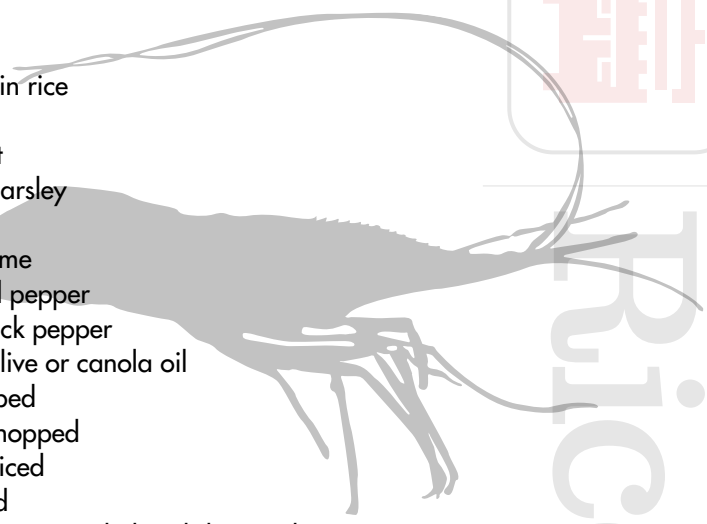- 
- 10 cups long grain rice
 - 12 cups water
 - 2 teaspoons salt
 - 4 tablespoons parsley
 - 12 whole cloves
 - 2 teaspoons thyme
 - 2 teaspoons red pepper
 - 2 teaspoons black pepper
 - 4 tablespoons olive or canola oil
 - 4 cups ham, cubed
 - 4 cups onion, chopped
 - 4 cups celery, diced
 - 16 cloves, minced
 - 6 lbs. cooked shrimp, peeled and deveined
 - 4 medium green bell peppers, diced
 - 4 cans whole or stewed tomatoes, chopped

DIRECTIONS

- 1) Measure rice, water, salt, parsley, cloves, thyme, red pepper and black pepper into rice pan. Set pan into rice cooker base.
- 2) Stir. Make sure rice pot is level and in complete contact with the heater plate. Cover the rice pot. Push the **ON** button.
- 3) Press the **COOK** button. After the cook light goes out the **HOLD** light will come on. Allow the rice to cure for an additional 10-15 minutes.
- 4) Place wok or large skillet over medium high heat until hot. Add olive oil and spread to coat the pan. Saute the ham, onion, celery and garlic until lightly browned.
- 5) Add shrimp, bell peppers and tomatoes to wok. Simmer until peppers are tender.
- 6) Stir rice into shrimp mixture.



Town Food Service Equipment Company, Inc.

718/388-5650 outside New York State 800/221-5032

Rice Pilaf

30 servings

INGREDIENTS

- 10 cups long grain rice
- 13 cups chicken broth or water (if broth is unsalted add 3-4 teaspoons salt; If using water, add 12 to 13 chicken bouillon cubes) ½ cup wild rice, precooked by microwaving on high for 20 minutes with 1½ cups water and drained
- 1 cup butter or margarine
- 2½ cups celery, chopped
- 2 cups slivered almonds
- 5 cups fresh mushrooms, chopped or sliced
- 4 cups green onions, sliced

DIRECTIONS

Measure rice, chicken broth or water/bullion mixture, into rice pan.

Cook's note: 10 cups long grain rice cooked in 13 cups of broth yields about 30 cups cooked rice.

- 1) Heat a large skillet over medium heat. Add butter. Spread to coat pan.
- 2) Saute celery, slivered almonds and wild rice for about 3-4 minutes.
- 3) Add mushrooms and green onions. Cook and stir until lightly browned.
- 4) Add mixture to rice and water, stir well.
- 5) Make sure rice pot is level and in complete contact with the heater plate. Cover the rice pot. Push the **ON** button.
- 6) Press the **COOK** button. After the cook light goes out the **HOLD** light will come on. Allow the rice to cure for an additional 10 to 15 minutes.
- 7) Stir again to mix and fluff the rice. Serve immediately. Close lid after each serving to prevent the rice from drying or discoloring.



Town Food Service Equipment Company, Inc.

718/388-5650 outside New York State 800/221-5032

SPECIFICATIONS FOR MODEL 56822 AND 56824

power supply _____	120V AC (56822), 230V AC (56824)
hertz _____	60 (56822), 50/60 (56824)
watts _____	1700 (56822), 1500 (56824)
amps _____	14 (56822), 7 (56824)
time to cook [○] _____	31 mins. (56822), 44 (56824)
capacities ^{○○}	
raw rice _____	8 lb. (25 cups)
cooked rice _____	19 lb. (50 cups)
total liquid capacity _____	11 quarts
sizes (dia. x ht.) _____	14 ³ / ₄ x 12"
unit weight _____	15 lbs.
ship weight _____	30 lb. (packed 2 per case)
cord length _____	72"

SPECIFICATIONS FOR MODEL 57137, 57138 AND 57155

power supply _____	120V AC (57137), 230V AC (57138/55)
hertz _____	60 (57137), 50/60 (57138/55)
watts _____	1700 (57137), 1500 (56824)
amps _____	18 (57137), 9 (57138), 15 (57155)
time to cook [○] _____	43 mins. (57137), 48 mins. (57138) 46 mins.(57155)
capacities ^{○○}	
raw rice _____	13 lb./37 cups (57137/38) 18 lb./55 cups (57155)
cooked rice _____	28 lb. (74 cups) (57137/38) 42 lb. (110 cups) (57137/38)
total liquid capacity _____	13 ¹ / ₄ quarts
sizes (dia. x ht.) _____	15 ³ / ₄ " x 12 ³ / ₄ " (57137/38) 19"x15 ¹ / ₂ " (57155)
unit weight _____	22 lbs. (57137/38), 29 lbs. (57155)
ship weight _____	22 lbs. (57137/38), 36 lbs. (57155)
cord length _____	72"

- for better rice, allow 10 additional minutes for rice to cure after cooking
- capacities are approximate



RICE WARMER LIMITED WARRANTY

Town Food Service Equipment Co., Inc. (Town) warrants it's rice cookers to be free of defects in materials and workmanship, subject to the terms specified below. This warranty is limited to parts replacement and does not include any labor allowance. Any service charges or charges for parts replacement are the customer's responsibility. Commercial electric RiceMasters are warranted for a period of (2) years. The warranty period for all electric rice cookers shall commence at time of shipment from Town. The warranty period may be extended, at Town's option, if proof of installation (specifying model and serial number) at a later date, but in no case shall warranty be extended beyond (9) months after date of shipment from Town.

Parts and labor are covered for the warranty period for properly packed units returned to Town prepaid. Town cannot be responsible for shipping damages to any unit returned with improper packaging. Parts that have failed due to defective materials or workmanship will be replaced at no charge. Units repaired under warranty will be returned freight prepaid. Warranty for the new parts will be for the remainder of the original warranty period. Freight will be added to the invoice for nonwarranty repairs. There will be no credit for defective units returned.

Customers are requested to clean units before returning them for service. Units returned in abused or unsanitary condition will not be serviced without the customer's consent to pay an appropriate labor charge to clean and repair the rice cooker. If the customer does not agree, the unit will be returned without cleaning or repair. This warranty does not cover any failures or operating difficulties due to accident, abuse, misuse, alteration, misapplication, improper installation or improper maintenance or service. Town does not authorize any person or company to assume on it's behalf any obligation or liability in connection with this unit in any manner whatsoever. If warranty service becomes necessary, the unit must be brought to the dealer where rice cooker was purchased, carefully packaged. Be sure to insulate the enamel jacket from the rice pot. Town will charge for repairs to units returned and damaged due to abuse for any reason. Units must be carefully packed to avoid damage during shipment. The returning agency is entitled to request from the purchaser the costs of shipping and handling charges to return the unit. Before any unit is returned, call Town at 718/388-5650 and request a Return Goods Authorization (RGA). Be advised this RGA is only authorization to return your unit for evaluation. No credit of any kind may be taken arising from an RGA. The unit will be inspected to verify the difficulty for which it was returned. Once the difficulty is verified, it will be repaired and the unit returned at no charge if due to faulty materials and/or workmanship. If defective for any other reason, the unit will be repaired and the customer charged for the cost of the labor and materials for the repair plus return delivery costs.

If unit must be returned to Town, carefully pack (preferably in the original carton), send prepaid, adequately insured, and with the RGA clearly marked on the outside of the package.



Town Food Service Equipment Company, Inc.

718/388-5650 outside New York State 800/221-5032

**Other products from the company with 83 years of
Chinese food service experience.
Please ask your dealer for details.**



WOK RANGES AND SMOKERS



GAS AND ELECTRIC RICE COOKERS AND WARMERS



SMALL WARES



TOWN

**珍公司
富司**

FOOD SERVICE EQUIPMENT CO., INC.

72 Beadel Street Brooklyn, NY 11222

718/388-5650 outside New York State 800/221-5032

facsimile 718/388-5860

www.townfood.com